


FAQ

N°10

How to read a **ULYS** meter (TDA80,TD80, TTA ,TT)

Navigation and structure of pages displayed

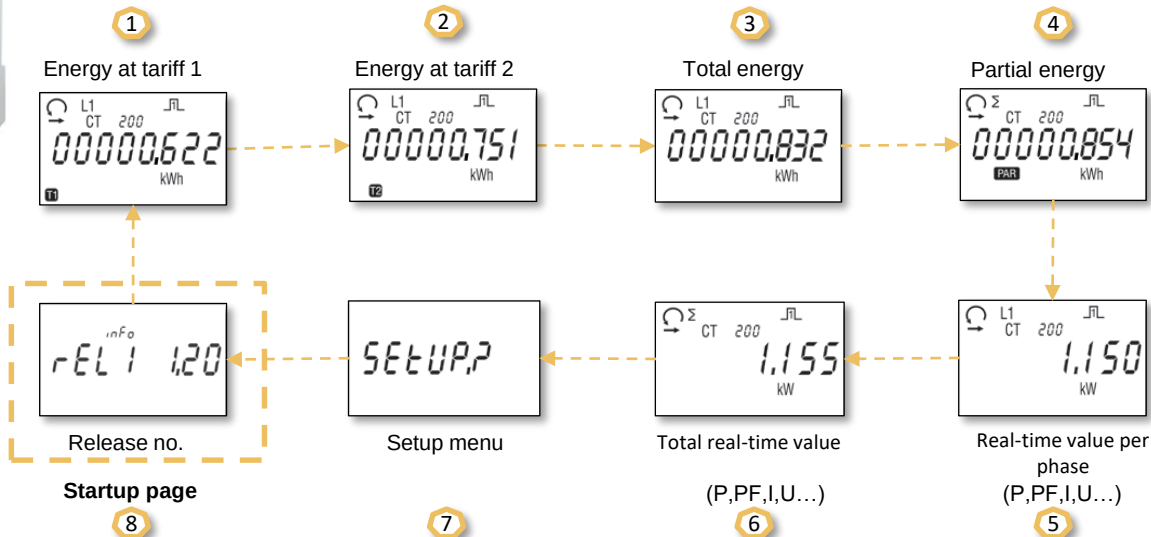

1. When powered up, the meter displays page 8


2. The key can be used to go to the next page

3. Inside each page, the parameters are arranged in a loop, so to switch the display to the next parameter, simply press 4.



Standard screen structure

5. For each, pay attention to the display of:

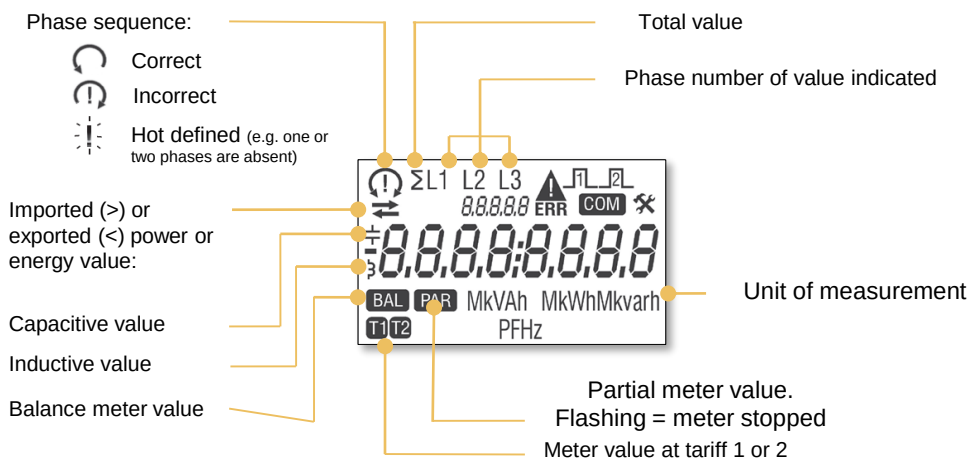

For example, for the total active energy on page 3, no T1 or T2 tariff display and no indication of BAL or PAR:

