

MS1- 7484 ed04

MODBUS communication protocol

ULYSCOM MODBUS RS485

ULYSCOM ETHERNET MODBUS TCP

ULYS TD80 MODBUS, ULYS TD80-M MODBUS

ULYS TD80 ETHERNET, ULYS TD80-M ETHERNET

ULYS TT MODBUS, ULYS TT-M MODBUS

ULYS TT ETHERNET, ULYS TT-M ETHERNET

Limitation of Liability

The Manufacturer reserves the right to modify the specifications in this manual without previous warning. Any copy of this manual, in part or in full, whether by photocopy or by other means, even of electronic nature, without the manufacture giving written authorisation, breaches the terms of copyright and is liable to prosecution.

It is absolutely forbidden to use the device for different uses other than those for which it has been devised for, as inferred to in this manual. When using the features in this device, obey all laws and respect privacy and legitimate rights of others.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL THE MANUFACTURER BE LIABLE FOR CONSEQUENTIAL DAMAGES SUSTAINED IN CONNECTION WITH SAID PRODUCT AND THE MANUFACTURER NEITHER ASSUMES NOR AUTHORIZES ANY REPRESENTATIVE OR OTHER PERSON TO ASSUME FOR IT ANY OBLIGATION OR LIABILITY OTHER THAN SUCH AS IS EXPRESSLY SET FORTH HEREIN.

All trademarks in this manual are property of their respective owners.

The information contained in this manual is for information purposes only, is subject to changes without previous warning and cannot be considered binding for the Manufacturer. The Manufacturer assumes no responsibility for any errors or incoherence possibly contained in this manual.

MODBUS communication protocol

ULYSCOM MODBUS RS485

ULYSCOM ETHERNET MODBUS TCP

ULYS TD80 MODBUS, ULYS TD80-M MODBUS

ULYS TD80 ETHERNET, ULYS TD80-M ETHERNET

ULYS TT MODBUS, ULYS TT-M MODBUS

ULYS TT ETHERNET, ULYS TT-M ETHERNET

October edition 2014

Index

1. Description	5
1.1 LRC generation.....	6
1.2 CRC generation	7
2. Read commands structure.....	10
2.1 MODBUS ASCII/RTU	10
2.2 MODBUS TCP.....	11
2.3 Floating point as per IEEE Standard.....	12
3. Write commands structure	13
3.1 MODBUS ASCII/RTU	13
3.2 MODBUS TCP.....	14
4. Exception codes	15
4.1 MODBUS ASCII/RTU	15
4.2 MODBUS TCP.....	15
5. Register tables	16
6. Register set 0.....	17
6.1 READING registers (Function code \$01/\$03/\$04).....	17
6.2 WRITING registers (Function code \$10)	24
7. Register set 1.....	25
7.1 READING registers (Function code \$01/\$03/\$04).....	25
7.2 WRITING registers (Function code \$10)	32

1. Description

MODBUS ASCII/RTU is a master-slave communication protocol, able to support up to 247 slaves connected in a bus or a star network.

The protocol uses a simplex connection on a single line. In this way, the communication messages move on a single line in two opposite directions.

MODBUS TCP is a variant of the MODBUS family. Specifically, it covers the use of MODBUS messaging in an "Intranet" or "Internet" environment using the TCP/IP protocol on a fixed port **502**.

Master-slave messages can be:

- **Reading (Function code \$01 / \$03 / \$04)**: the communication is between the master and a single slave. It allows to read information about the queried counter
- **Writing (Function code \$10)**: the communication is between the master and a single slave. It allows to change the counter settings
- **Broadcast (not available for MODBUS TCP)**: the communication is between the master and all the connected slaves. It is always a write command (Function code \$10) and required logical number \$00

In a multi-point type connection (MODBUS ASCII/RTU), **slave address** (called also **logical number**) allows to identify each counter during the communication. Each communication module is preset with a default slave address (01) and the user can change it.

In case of MODBUS TCP, slave address is replaced by a single byte, the **Unit identifier**.

COMMUNICATION FRAME STRUCTURE

ASCII mode

Bit per byte: 1 Start, 7 Bit, Even, 1 Stop (7E1)

Name	Length	Function
START FRAME	1 char	Message start marker. Starts with colon ":" (\$3A)
ADDRESS FIELD	2 chars	Counter logical number
FUNCTION CODE	2 chars	Function code (\$01 / \$03 / \$04 / \$10)
DATA FIELD	n chars	Data + length will be filled depending on the message type
ERROR CHECK	2 chars	Error check (LRC)
END FRAME	2 chars	Carriage return - line feed (CRLF) pair (\$0D & \$0A)

RTU mode

Bit per byte: 1 Start, 8 Bit, None, 1 Stop (8N1)

Name	Length	Function
START FRAME	4 chars idle	At least 4 character time of silence (MARK condition)
ADDRESS FIELD	8 bits	Counter logical number
FUNCTION CODE	8 bits	Function code (\$01 / \$03 / \$04 / \$10)
DATA FIELD	n x 8 bits	Data + length will be filled depending on the message type
ERROR CHECK	16 bits	Error check (CRC)
END FRAME	4 chars idle	At least 4 character time of silence between frames

TCP mode

Bit per byte: 1 Start, 7 Bit, Even, 2 Stop (7E2)

Name	Length	Function
TRANSACTION ID	2 bytes	For synchronization between messages of server & client
PROTOCOL ID	2 bytes	Zero for MODBUS TCP
BYTE COUNT	2 bytes	Number of remaining bytes in this frame
UNIT ID	1 byte	Slave address (\$FF if not used)
FUNCTION CODE	1 byte	Function code (\$01 / \$04 / \$10)
DATA BYTES	n bytes	Data as response or command

1.1 LRC generation

The Longitudinal Redundancy Check (LRC) field is one byte, containing an 8-bit binary value. The LRC value is calculated by the transmitting device, which appends the LRC to the message. The receiving device recalculates an LRC during receipt of the message, and compares the calculated value to the actual value it received in the LRC field. If the two values are not equal, an error results. The LRC is calculated by adding together successive 8-bit bytes in the message, discarding any carries, and then two's complementing the result. The LRC is an 8-bit field, therefore each new addition of a character that would result in a value higher than 255 decimal simply 'rolls over' the field's value through zero. Because there is no ninth bit, the carry is discarded automatically.

A procedure for generating an LRC is:

1. Add all bytes in the message, excluding the starting 'colon' and ending CR LF. Add them into an 8-bit field, so that carries will be discarded.
2. Subtract the final field value from \$FF, to produce the ones-complement.
3. Add 1 to produce the twos-complement.

PLACING THE LRC INTO THE MESSAGE

When the the 8-bit LRC (2 ASCII characters) is transmitted in the message, the high-order character will be transmitted first, followed by the low-order character. For example, if the LRC value is \$52 (0101 0010):

Colon '.'	Addr	Func	Data Count	Data	Data	...	Data	LRC Hi '5'	LRC Lo '2'	CR	LF
--------------	------	------	---------------	------	------	-----	------	---------------	---------------	----	----

C-FUNCTION TO CALCULATE LRC

*pucFrame - pointer on "Addr" of message

usLen - length message from "Addr" to end "Data"

```

UCHAR prvucMBLRC( UCHAR * pucFrame, USHORT usLen )
{
    UCHAR          ucLRC = 0; /* LRC char initialized */

    while( usLen-- )
    {
        ucLRC += *pucFrame++; /* Add buffer byte without carry */
    }

    /* Return twos complement */
    ucLRC = ( UCHAR ) ( -( ( CHAR ) ucLRC ) );
    return ucLRC;
}

```

1.2 CRC generation

The Cyclical Redundancy Check (CRC) field is two bytes, containing a 16-bit value. The CRC value is calculated by the transmitting device, which appends the CRC to the message. The receiving device recalculates a CRC during receipt of the message, and compares the calculated value to the actual value it received in the CRC field. If the two values are not equal, an error results.

The CRC is started by first preloading a 16-bit register to all 1's. Then a process begins of applying successive 8-bit bytes of the message to the current contents of the register. Only the eight bits of data in each character are used for generating the CRC. Start and stop bits, and the parity bit, do not apply to the CRC.

During generation of the CRC, each 8-bit character is exclusive ORed with the register contents. Then the result is shifted in the direction of the least significant bit (LSB), with a zero filled into the most significant bit (MSB) position. The LSB is extracted and examined. If the LSB was a 1, the register is then exclusive ORed with a preset, fixed value. If the LSB was a 0, no exclusive OR takes place.

This process is repeated until eight shifts have been performed. After the last (eighth) shift, the next 8-bit character is exclusive ORed with the register's current value, and the process repeats for eight more shifts as described above. The final contents of the register, after all the characters of the message have been applied, is the CRC value.

A calculated procedure for generating a CRC is:

1. Load a 16-bit register with \$FFFF. Call this the CRC register.
2. Exclusive OR the first 8-bit byte of the message with the low-order byte of the 16-bit CRC register, putting the result in the CRC register.
3. Shift the CRC register one bit to the right (toward the LSB), zero-filling the MSB. Extract and examine the LSB.
4. (If the LSB was 0): Repeat Step 3 (another shift).
(If the LSB was 1): Exclusive OR the CRC register with the polynomial value \$A001 (1010 0000 0000 0001).
5. Repeat Steps 3 and 4 until 8 shifts have been performed. When this is done, a complete 8-bit byte will have been processed.
6. Repeat Steps 2 through 5 for the next 8-bit byte of the message. Continue doing this until all bytes have been processed.
7. The final contents of the CRC register is the CRC value.
8. When the CRC is placed into the message, its upper and lower bytes must be swapped as described below.

PLACING THE CRC INTO THE MESSAGE

When the 16-bit CRC (two 8-bit bytes) is transmitted in the message, the low-order byte will be transmitted first, followed by the high-order byte.

For example, if the CRC value is \$35F7 (0011 0101 1111 0111):

Addr	Func	Data Count	Data	Data	...	Data	CRC lo F7	CRC hi 35
------	------	---------------	------	------	-----	------	--------------	--------------

CRC GENERATION FUNCTIONS - With Table

All of the possible CRC values are preloaded into two arrays, which are simply indexed as the function increments through the message buffer. One array contains all of the 256 possible CRC values for the high byte of the 16-bit CRC field, and the other array contains all of the values for the low byte. Indexing the CRC in this way provides faster execution than would be achieved by calculating a new CRC value with each new character from the message buffer.

```

/*CRC table for calculate with polynom 0xA001 with init value 0xFFFF, High half word*/
rom unsigned char CRC_Table_Hi[] = {
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81,
    0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0x01, 0xC0,
    0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0x00, 0xC1, 0x81, 0x40, 0x00, 0x00, 0xC1, 0x81, 0x40, 0x01,
    0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41,
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81,
    0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0,
    0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01,
    0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81,
    0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0,
    0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01,
    0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81,
    0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1,
    0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81,
    0x40,
    0x40
};
/*CRC table for calculate with polynom 0xA001 with init value 0xFFFF, Low half word*/
rom unsigned char CRC_Table_Lo[] = {
    0x00, 0xC0, 0xC1, 0x01, 0xC3, 0x03, 0xC2, 0xC6, 0x06, 0x07, 0xC7, 0x05, 0xC5, 0xC4,
    0x04, 0xCC, 0x0C, 0x0D, 0xCD, 0x0F, 0xCF, 0xCE, 0x0E, 0x0A, 0xCA, 0xCB, 0x0B, 0xC9, 0x09,
    0x08, 0xC8, 0xD8, 0x18, 0x19, 0xD9, 0x1B, 0xDB, 0xDA, 0x1A, 0x1E, 0xDE, 0xDF, 0x1F, 0xDD,
    0x1D, 0x1C, 0xDC, 0x14, 0xD4, 0xD5, 0x15, 0xD7, 0x17, 0x16, 0xD6, 0xD2, 0x12, 0x13, 0xD3,
    0x11, 0xD1, 0xD0, 0x10, 0xF0, 0x30, 0x31, 0xF1, 0x33, 0xF3, 0xF2, 0x32, 0x36, 0xF6, 0xF7,
    0x37, 0xF5, 0x35, 0x34, 0xF4, 0x3C, 0xFC, 0xFD, 0x3D, 0xFF, 0x3F, 0x3E, 0xFE, 0xFA, 0x3A,
    0x3B, 0xFB, 0x39, 0xF9, 0xF8, 0x38, 0x28, 0xE8, 0xE9, 0x29, 0xEB, 0x2B, 0x2A, 0xEA, 0xEE,
    0x2E, 0x2F, 0xEF, 0x2D, 0xED, 0xEC, 0x2C, 0xE4, 0x24, 0x25, 0xE5, 0x27, 0xE7, 0xE6, 0x26,
    0x22, 0xE2, 0xE3, 0x23, 0xE1, 0x21, 0x20, 0xE0, 0xA0, 0x60, 0x61, 0xA1, 0x63, 0xA3, 0xA2,
    0x62, 0x66, 0xA6, 0xA7, 0x67, 0xA5, 0x65, 0x64, 0xA4, 0x6C, 0xAC, 0xAD, 0x6D, 0xAF, 0x6F,
    0x6E, 0xAE, 0xAA, 0x6A, 0x6B, 0xAB, 0x69, 0xA9, 0xA8, 0x68, 0x78, 0xB8, 0xB9, 0x79, 0xBB,
    0x7B, 0x7A, 0xBA, 0xBE, 0x7E, 0x7F, 0xBF, 0x7D, 0xBD, 0xBC, 0x7C, 0xB4, 0x74, 0x75, 0xB5,
    0x77, 0xB7, 0xB6, 0x76, 0x72, 0xB2, 0xB3, 0x73, 0xB1, 0x71, 0x70, 0xB0, 0x50, 0x90, 0x91,
    0x51, 0x93, 0x53, 0x52, 0x92, 0x96, 0x56, 0x57, 0x97, 0x55, 0x95, 0x94, 0x54, 0x9C, 0x5C,
    0x5D, 0x9D, 0x5F, 0x9F, 0x9E, 0x5E, 0x5A, 0x9A, 0x9B, 0x5B, 0x99, 0x59, 0x58, 0x98, 0x88,
    0x48, 0x49, 0x89, 0x4B, 0x8B, 0x8A, 0x4A, 0x4E, 0x8E, 0x8F, 0x4F, 0x8D, 0x4D, 0x4C, 0x8C,
    0x44, 0x84, 0x85, 0x45, 0x87, 0x47, 0x46, 0x86, 0x82, 0x42, 0x43, 0x83, 0x41, 0x81, 0x80,
    0x40
};
};

unsigned short ModBus_CRC16( unsigned char * Buffer, unsigned short Length )
{
    unsigned char CRCHi = 0xFF;
    unsigned char CRCLo = 0xFF;
    int Index;
    unsigned short ret;

    while( Length-- )
    {
        Index = CRCLo ^ *Buffer++ ;
        CRCLo = CRCHi ^ CRC_Table_Hi[Index];
        CRCHi = CRC_Table_Lo[Index];
    }
    ret=((unsigned short)CRCHi << 8);
    ret|= (unsigned short)CRCLo;
    return ret;
}

```


CRC GENERATION FUNCTIONS - Without Table

```

unsigned short ModBus_CRC16( unsigned char * Buffer, unsigned short Length )
{
/* ModBus_CRC16 Calculatd CRC16 with polynome 0xA001 and init value 0xFFFF
Input *Buffer - pointer on data
Input Lenght - number byte in buffer
Output - calculated CRC16
*/
    unsigned int cur_crc;

    cur_crc=0xFFFF;
    do
    {
        unsigned int i = 8;
        cur_crc = cur_crc ^ *Buffer++;
        do
        {
            if (0x0001 & cur_crc)
            {
                cur_crc >>= 1;
                cur_crc ^= 0xA001;
            }
            else
            {
                cur_crc >>= 1;
            }
        }
        while (--i);
    }
    while (--Length);

    return cur_crc;
}

```

2. Read commands structure

In case of module combined with counter: The master communication device can send commands to the module to read its status and setup or to read the measured values, status and setup relevant to the counter.

In case of counter with integrated communication: The master communication device can send commands to the counter to read its status, setup and the measured values.

More registers can be read, at the same time, sending a single command, only if the registers are consecutive (see chapter 5).

According to the used MODBUS protocol mode, the read command is structured as follows.

2.1 MODBUS ASCII/RTU

Values contained both in Query or Response messages are in hex format.

Query example in case of MODBUS RTU: 01030002000265CB

Example	Byte	Description	No. of bytes
01	-	Slave address	1
03	-	Function code	1
00	High	Starting register	2
02	Low		
00	High	No. of words to be read	2
02	Low		
65	High	Error check (CRC)	2
CB	Low		

Response example in case of MODBUS RTU: 01030400035571F547

Example	Byte	Description	No. of bytes
01	-	Slave address	1
03	-	Function code	1
04	-	Byte count	1
00	High	Requested data	4
03	Low		
55	High		
71	Low		
F5	High	Error check (CRC)	2
47	Low		

2.2 MODBUS TCP

Values contained both in Query or Response messages are in hex format.

Query example in case of MODBUS TCP: 010000000006010400020002

Example	Byte	Description	No. of bytes
01	-	Transaction identifier	1
00	High	Protocol identifier	4
00	Low		
00	High		
00	Low		
06	-	Byte count	1
01	-	Unit identifier	1
04	-	Function code	1
00	High	Starting register	2
02	Low		
00	High	No. of words to be read	2
02	Low		

Response example in case of MODBUS TCP: 01000000000701040400035571

Example	Byte	Description	No. of bytes
01	-	Transaction identifier	1
00	High	Protocol identifier	4
00	Low		
00	High		
00	Low		
07	-	Byte count	1
01	-	Unit identifier	1
04	-	Function code	1
04	-	No. of byte of requested data	2
00	High	Requested data	4
03	Low		
55	High		
71	Low		

2.3 Floating point as per IEEE Standard


The basic format allows a IEEE standard floating-point number to be represented in a single 32 bit format, as shown below:

$$N.n = (-1)^S 2^{e-127} (1.f)$$

where **S** is the sign bit, **e'** is the first part of the exponent and **f** is the decimal fraction placed next to 1. Internally the exponent is 8 bits in length and the stored fraction is 23 bits long.

A round to nearest method is applied to the calculated value of floating point.

The floating-point format is shown as follows:

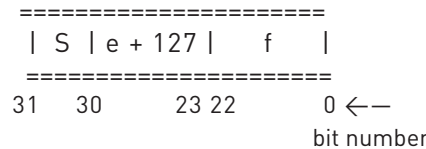

where:

	bit length
Sign	1
Exponent	8
Fraction	23 + {1}
Total	m = 32 + {1}
Exponent	
Min e'	0
Max e'	255
Bias	127



 
Fractions (decimals) are always shown while the capacitive 1 (hidden bit) is not stored.

EXAMPLE OF CONVERSION OF VALUE SHOWN WITH FLOATING POINT

Value read with floating point:

$$45AACC00_{(16)}$$

Value converted in binary format:



$$\text{sign} = 0$$

$$\text{exponent} = 10001011_2 = 139_{10}$$

$$\begin{aligned} \text{fraction} &= 010101011001100000000000_2 / 8388608_{10} = \\ &= 2804736_{10} / 8388608_{10} = 0.334350585_{10} \end{aligned}$$

$$\begin{aligned} N.n &= (-1)^S 2^{e-127} (1+f) = \\ &= (-1)^0 2^{139-127} (1.334350585) = \\ &= (+1) (4096) (1.334350585) = \\ &= 5465.5 \end{aligned}$$

3. Write commands structure

In case of module combined with counter: The master communication device can send commands to the module to program itself or to program the counter.

In case of counter with integrated communication: The master communication device can send commands to the counter to program it.

More settings can be carried out, at the same time, sending a single command, only if the relevant registers are consecutive (see chapter 5).

According to the used MODBUS protocol type, the write command is structured as follows.

3.1 MODBUS ASCII/RTU

Values contained both in Request or Response messages are in hex format.

Query example in case of MODBUS RTU: 011005150001020008F053

Example	Byte	Description	No. of bytes
01	-	Slave address	1
10	-	Function code	1
05	High	Starting register	2
15	Low		
00	High	No. of words to be written	2
01	Low		
02	-	Data byte counter	1
00	High	Data for programming	2
08	Low		
F0	High	Error check (CRC)	2
53	Low		

Response example in case of MODBUS RTU: 01100515000110C1

Example	Byte	Description	No. of bytes
01	-	Slave address	1
10	-	Function code	1
05	High	Starting register	2
15	Low		
00	High	No. of written words	2
01	Low		
10	High	Error check (CRC)	2
C1	Low		

3.2 MODBUS TCP

Values contained both in Request or Response messages are in hex format.

Query example in case of MODBUS TCP: 010000000009011005150001020008

Example	Byte	Description	No. of bytes
01	-	Transaction identifier	1
00	High	Protocol identifier	4
00	Low		
00	High		
00	Low		
09	-	Byte count	1
01	-	Unit identifier	1
10	-	Function code	1
05	High	Starting register	2
15	Low		
00	High	No. of words to be written	2
01	Low		
02	-	Data byte counter	1
00	High	Data for programming	2
08	Low		

Response example in case of MODBUS TCP: 010000000006011005150001

Example	Byte	Description	No. of bytes
01	-	Transaction identifier	1
00	High	Protocol identifier	4
00	Low		
00	High		
00	Low		
06	-	Byte count	1
01	-	Unit identifier	1
10	-	Function code	1
05	High	Starting register	2
15	Low		
00	High	Command successfully sent	2
01	Low		

4. Exception codes

In case of module combined with counter: When the module receives a not-valid query, an error message (exception code) is sent.

In case of counter with integrated communication: When the counter receives a not-valid query, an error message (exception code) is sent.

According to the used MODBUS protocol mode, possible exception codes are as follows.

4.1 MODBUS ASCII/RTU

Values contained in Response messages are in hex format.

Response example in case of MODBUS RTU: 01830131F0

Example	Byte	Description	No. of bytes
01	-	Slave address	1
83	-	Function code (80+03)	1
01	-	Exception code	1
31	High	Error check (CRC)	2
F0	Low		

Exception codes for MODBUS ASCII/RTU are following described:

- \$01 ILLEGAL FUNCTION:** the function code received in the query is not an allowable action.
- \$02 ILLEGAL DATA ADDRESS:** the data address received in the query is not an allowable address (i.e. the combination of register and transfer length is invalid).
- \$03 ILLEGAL DATA VALUE:** a value contained in the query data field is not an allowable value.
- \$04 ILLEGAL RESPONSE LENGTH:** the request would generate a response with size bigger than that available for MODBUS protocol.

4.2 MODBUS TCP

Values contained in Response messages are in hex format.

Response example in case of MODBUS TCP: 010000000003018302

Example	Byte	Description	No. of bytes
01	-	Transaction identifier	1
00	High	Protocol identifier	4
00	Low		
00	High		
00	Low		
03	-	No. of byte of next data in this string	1
01	-	Unit identifier	1
83	-	Function code (80+03)	1
02	-	Exception code	1

Exception codes for MODBUS TCP are following described:

- \$01 ILLEGAL FUNCTION:** the function code is unknown by the server.

- \$02 ILLEGAL DATA ADDRESS:** the data address received in the query is not an allowable address for the counter (i.e. the combination of register and transfer length is invalid).
- \$03 ILLEGAL DATA VALUE:** a value contained in the query data field is not an allowable value for the counter.
- \$04 SERVER FAILURE:** the server failed during the execution.
- \$05 ACKNOWLEDGE:** the server accepted the server invocation but the service requires a relatively long time to execute. The server therefore returns only an acknowledgement of the service invocation receipt.
- \$06 SERVER BUSY:** the server was unable to accept the MB request PDU. The client application has the responsibility of deciding if and when re-sending the request.
- \$0A GATEWAY PATH UNAVAILABLE:** the communication module (or the counter, in case of counter with integrated communication) is not configured or cannot communicate.
- \$0B GATEWAY TARGET DEVICE FAILED TO RESPOND:** the counter is not available in the network.

5. Register tables



NOTE

Highest number of registers (or bytes) which can be read with a single command:

- in ASCII mode: 63 registers
- in RTU mode: 127 registers
- in TCP mode: 256 bytes



NOTE

Highest number of registers which can be programmed with a single command:

- in ASCII mode: 13 registers
- in RTU mode: 29 registers
- in TCP mode: 1 register



NOTE

The register values are in hex format (\$).



NOTE

The register description in *Italic* shows all the measurements available for 1-phase counter.

TABLE HEADER	MEANING
Parameter	Measuring parameter to be read
Register description	Description of the register to be read / written
F. code (Hex)	Function code in hex format. It identifies the command type (reading / writing)
Sign	If this column is checked, the read register value can have positive or negative sign. The negative values are represented with 2's complement.
INTEGER	Details for INTEGER type registers
IEEE	Details for IEEE standard type registers
Register (Hex)	Register address in hex format
Words	Number of word to be read / written for the register (length)
M.U.	Measuring unit of parameter
Data meaning	Description of data received by a response of a reading command
Programmable data	Description of data which can be sent for a writing command

Two register set can be selected for communication, according to the module or the counter with integrated communication:

- **Register set 0:** even / odd words registers.
- **Register set 1:** even words registers. Not available for LAN GATEWAY modules, available only for counters with integrated MODBUS, counters with integrated ETHERNET or RS485 modules with firmware release 2.00 or higher.

It is possible to switch from Register set 0 to 1 and viceversa, function available only for counters with integrated communication or RS485 modules with firmware release 2.00 or higher.

6. Register set 0

6.1 READING registers (Function code \$01/\$03/\$04)

Parameter	F. code (Hex)	Sign	INTEGER			IEEE not available for MODBUS TCP		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.
REAL TIME VALUES								
V1 • L-N voltage phase 1	03/04		0000	2	mV	1000	2	V
V2 • L-N voltage phase 2	03/04		0002	2	mV	1002	2	V
V3 • L-N voltage phase 3	03/04		0004	2	mV	1004	2	V
V12 • L-L voltage line 12	03/04		0006	2	mV	1006	2	V
V23 • L-L voltage line 23	03/04		0008	2	mV	1008	2	V
V31 • L-L voltage line 31	03/04		000A	2	mV	100A	2	V
V_{Σ} • Average L-L voltage	03/04		000C	2	mV	100C	2	V
A1 • Phase 1 current	03/04	X	000E	2	mA	100E	2	A
A2 • Phase 2 current	03/04	X	0010	2	mA	1010	2	A
A3 • Phase 3 current	03/04	X	0012	2	mA	1012	2	A
AN • Neutral current	03/04	X	0014	2	mA	1014	2	A
A_{Σ} • Average current	03/04	X	0016	2	mA	1016	2	A
PF1 • Phase 1 power factor	03/04	X	0018	1	0.001	1018	2	-
PF2 • Phase 2 power factor	03/04	X	0019	1	0.001	101A	2	-
PF3 • Phase 3 power factor	03/04	X	001A	1	0.001	101C	2	-
PF_{Σ} • Total power factor	03/04	X	001B	1	0.001	101E	2	-
P1 • Phase 1 active power	03/04	X	001C	3	mW	1020	2	W
P2 • Phase 2 active power	03/04	X	001F	3	mW	1022	2	W
P3 • Phase 3 active power	03/04	X	0022	3	mW	1024	2	W
P_{Σ} • Total active power	03/04	X	0025	3	mW	1026	2	W
S1 • Phase 1 apparent power	03/04	X	0028	3	mVA	1028	2	VA
S2 • Phase 2 apparent power	03/04	X	002B	3	mVA	102A	2	VA
S3 • Phase 3 apparent power	03/04	X	002E	3	mVA	102C	2	VA
S_{Σ} • Total apparent power	03/04	X	0031	3	mVA	102E	2	VA
Q1 • Phase 1 reactive power	03/04	X	0034	3	mvar	1030	2	var
Q2 • Phase 2 reactive power	03/04	X	0037	3	mvar	1032	2	var
Q3 • Phase 3 reactive power	03/04	X	003A	3	mvar	1034	2	var
Q_{Σ} • Total reactive power	03/04	X	003D	3	mvar	1036	2	var
F • Frequency	03/04		0040	1	mHz	1038	2	Hz
Phase sequence INTEGER: \$00=123-CCW, \$01=321-CW, \$02=not available (1phase counter) IEEE: \$3DFBE76D=123-CCW, \$3E072B02=321-CW, \$0=not available (1phase counter)	03/04		0041	1	-	103A	2	-
Reserved	03/04		0042	3	-	-	-	-

Parameter	F. code (Hex)	Sign	INTEGER			IEEE not available for MODBUS TCP		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.
TOTAL COUNTER VALUES								
+kWh1 • Phase 1 imported active energy	03/04		0100	3	0.1 Wh	1100	2	Wh
+kWh2 • Phase 2 imported active energy	03/04		0103	3	0.1 Wh	1102	2	Wh
+kWh3 • Phase 3 imported active energy	03/04		0106	3	0.1 Wh	1104	2	Wh
+kWh Σ • Total imported active energy	03/04		0109	3	0.1 Wh	1106	2	Wh
-kWh1 • Phase 1 exported active energy	03/04		010C	3	0.1 Wh	1108	2	Wh
-kWh2 • Phase 2 exported active energy	03/04		010F	3	0.1 Wh	110A	2	Wh
-kWh3 • Phase 3 exported active energy	03/04		0112	3	0.1 Wh	110C	2	Wh
-kWh Σ • Total exported active energy	03/04		0115	3	0.1 Wh	110E	2	Wh
+kVAh1-L • Phase 1 imported inductive apparent energy	03/04		0118	3	0.1 VAh	1110	2	VAh
+kVAh2-L • Phase 2 imported inductive apparent energy	03/04		011B	3	0.1 VAh	1112	2	VAh
+kVAh3-L • Phase 3 imported inductive apparent energy	03/04		011E	3	0.1 VAh	1114	2	VAh
+kVAh Σ -L • Total imported inductive apparent energy	03/04		0121	3	0.1 VAh	1116	2	VAh
-kVAh1-L • Phase 1 exported inductive apparent energy	03/04		0124	3	0.1 VAh	1118	2	VAh
-kVAh2-L • Phase 2 exported inductive apparent energy	03/04		0127	3	0.1 VAh	111A	2	VAh
-kVAh3-L • Phase 3 exported inductive apparent energy	03/04		012A	3	0.1 VAh	111C	2	VAh
-kVAh Σ -L • Total exported inductive apparent energy	03/04		012D	3	0.1 VAh	111E	2	VAh
+kVAh1-C • Phase 1 imported capacitive apparent energy	03/04		0130	3	0.1 VAh	1120	2	VAh
+kVAh2-C • Phase 2 imported capacitive apparent energy	03/04		0133	3	0.1 VAh	1122	2	VAh
+kVAh3-C • Phase 3 imported capacitive apparent energy	03/04		0136	3	0.1 VAh	1124	2	VAh
+kVAh Σ -C • Total imported capacitive apparent energy	03/04		0139	3	0.1 VAh	1126	2	VAh
-kVAh1-C • Phase 1 exported capacitive apparent energy	03/04		013C	3	0.1 VAh	1128	2	VAh
-kVAh2-C • Phase 2 exported capacitive apparent energy	03/04		013F	3	0.1 VAh	112A	2	VAh
-kVAh3-C • Phase 3 exported capacitive apparent energy	03/04		0142	3	0.1 VAh	112C	2	VAh
-kVAh Σ -C • Total exported capacitive apparent energy	03/04		0145	3	0.1 VAh	112E	2	VAh
+kvarh1-L • Phase 1 imported inductive reactive energy	03/04		0148	3	0.1 varh	1130	2	varh
+kvarh2-L • Phase 2 imported inductive reactive energy	03/04		014B	3	0.1 varh	1132	2	varh
+kvarh3-L • Phase 3 imported inductive reactive energy	03/04		014E	3	0.1 varh	1134	2	varh
+kvarh Σ -L • Total imported inductive reactive energy	03/04		0151	3	0.1 varh	1136	2	varh
-kvarh1-L • Phase 1 exported inductive reactive energy	03/04		0154	3	0.1 varh	1138	2	varh
-kvarh2-L • Phase 2 exported inductive reactive energy	03/04		0157	3	0.1 varh	113A	2	varh
-kvarh3-L • Phase 3 exported inductive reactive energy	03/04		015A	3	0.1 varh	113C	2	varh
-kvarh Σ -L • Total exported inductive reactive energy	03/04		015D	3	0.1 varh	113E	2	varh
+kvarh1-C • Phase 1 imported capacitive reactive energy	03/04		0160	3	0.1 varh	1140	2	varh
+kvarh2-C • Phase 2 imported capacitive reactive energy	03/04		0163	3	0.1 varh	1142	2	varh
+kvarh3-C • Phase 3 imported capacitive reactive energy	03/04		0166	3	0.1 varh	1144	2	varh
+kvarh Σ -C • Total imported capacitive reactive energy	03/04		0169	3	0.1 varh	1146	2	varh
-kvarh1-C • Phase 1 exported capacitive reactive energy	03/04		016C	3	0.1 varh	1148	2	varh
-kvarh2-C • Phase 2 exported capacitive reactive energy	03/04		016F	3	0.1 varh	114A	2	varh
-kvarh3-C • Phase 3 exported capacitive reactive energy	03/04		0172	3	0.1 varh	114C	2	varh
-kvarh Σ -C • Total exported capacitive reactive energy	03/04		0175	3	0.1 varh	114E	2	varh
Reserved	03/04		0178	3	-	-	-	-

Parameter	F. code (Hex)	Sign	INTEGER			IEEE not available for MODBUS TCP		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.
TARIFF 1 COUNTER VALUES (not available for counter with integrated ETHERNET)								
+kWh1 • Phase 1 imported active energy	03/04		0200	3	0.1 Wh	1200	2	Wh
+kWh2 • Phase 2 imported active energy	03/04		0203	3	0.1 Wh	1202	2	Wh
+kWh3 • Phase 3 imported active energy	03/04		0206	3	0.1 Wh	1204	2	Wh
+kWh Σ • Total imported active energy	03/04		0209	3	0.1 Wh	1206	2	Wh
-kWh1 • Phase 1 exported active energy	03/04		020C	3	0.1 Wh	1208	2	Wh
-kWh2 • Phase 2 exported active energy	03/04		020F	3	0.1 Wh	120A	2	Wh
-kWh3 • Phase 3 exported active energy	03/04		0212	3	0.1 Wh	120C	2	Wh
-kWh Σ • Total exported active energy	03/04		0215	3	0.1 Wh	120E	2	Wh
+kVAh1-L • Phase 1 imported inductive apparent energy	03/04		0218	3	0.1 VAh	1210	2	VAh
+kVAh2-L • Phase 2 imported inductive apparent energy	03/04		021B	3	0.1 VAh	1212	2	VAh
+kVAh3-L • Phase 3 imported inductive apparent energy	03/04		021E	3	0.1 VAh	1214	2	VAh
+kVAh Σ -L • Total imported inductive apparent energy	03/04		0221	3	0.1 VAh	1216	2	VAh
-kVAh1-L • Phase 1 exported inductive apparent energy	03/04		0224	3	0.1 VAh	1218	2	VAh
-kVAh2-L • Phase 2 exported inductive apparent energy	03/04		0227	3	0.1 VAh	121A	2	VAh
-kVAh3-L • Phase 3 exported inductive apparent energy	03/04		022A	3	0.1 VAh	121C	2	VAh
-kVAh Σ -L • Total exported inductive apparent energy	03/04		022D	3	0.1 VAh	121E	2	VAh
+kVAh1-C • Phase 1 imported capacitive apparent energy	03/04		0230	3	0.1 VAh	1220	2	VAh
+kVAh2-C • Phase 2 imported capacitive apparent energy	03/04		0233	3	0.1 VAh	1222	2	VAh
+kVAh3-C • Phase 3 imported capacitive apparent energy	03/04		0236	3	0.1 VAh	1224	2	VAh
+kVAh Σ -C • Total imported capacitive apparent energy	03/04		0239	3	0.1 VAh	1226	2	VAh
-kVAh1-C • Phase 1 exported capacitive apparent energy	03/04		023C	3	0.1 VAh	1228	2	VAh
-kVAh2-C • Phase 2 exported capacitive apparent energy	03/04		023F	3	0.1 VAh	122A	2	VAh
-kVAh3-C • Phase 3 exported capacitive apparent energy	03/04		0242	3	0.1 VAh	122C	2	VAh
-kVAh Σ -C • Total exported capacitive apparent energy	03/04		0245	3	0.1 VAh	122E	2	VAh
+kvarh1-L • Phase 1 imported inductive reactive energy	03/04		0248	3	0.1 varh	1230	2	varh
+kvarh2-L • Phase 2 imported inductive reactive energy	03/04		024B	3	0.1 varh	1232	2	varh
+kvarh3-L • Phase 3 imported inductive reactive energy	03/04		024E	3	0.1 varh	1234	2	varh
+kvarh Σ -L • Total imported inductive reactive energy	03/04		0251	3	0.1 varh	1236	2	varh
-kvarh1-L • Phase 1 exported inductive reactive energy	03/04		0254	3	0.1 varh	1238	2	varh
-kvarh2-L • Phase 2 exported inductive reactive energy	03/04		0257	3	0.1 varh	123A	2	varh
-kvarh3-L • Phase 3 exported inductive reactive energy	03/04		025A	3	0.1 varh	123C	2	varh
-kvarh Σ -L • Total exported inductive reactive energy	03/04		025D	3	0.1 varh	123E	2	varh
+kvarh1-C • Phase 1 imported capacitive reactive energy	03/04		0260	3	0.1 varh	1240	2	varh
+kvarh2-C • Phase 2 imported capacitive reactive energy	03/04		0263	3	0.1 varh	1242	2	varh
+kvarh3-C • Phase 3 imported capacitive reactive energy	03/04		0266	3	0.1 varh	1244	2	varh
+kvarh Σ -C • Total imported capacitive reactive energy	03/04		0269	3	0.1 varh	1246	2	varh
-kvarh1-C • Phase 1 exported capacitive reactive energy	03/04		026C	3	0.1 varh	1248	2	varh
-kvarh2-C • Phase 2 exported capacitive reactive energy	03/04		026F	3	0.1 varh	124A	2	varh
-kvarh3-C • Phase 3 exported capacitive reactive energy	03/04		0272	3	0.1 varh	124C	2	varh
-kvarh Σ -C • Total exported capacitive reactive energy	03/04		0275	3	0.1 varh	124E	2	varh
Reserved	03/04		0278	3	-	-	-	-

Parameter	F. code (Hex)	Sign	INTEGER			IEEE not available for MODBUS TCP		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.
TARIFF 2 COUNTER VALUES (not available for counter with integrated ETHERNET)								
+kWh1 • Phase 1 imported active energy	03/04		0300	3	0.1 Wh	1300	2	Wh
+kWh2 • Phase 2 imported active energy	03/04		0303	3	0.1 Wh	1302	2	Wh
+kWh3 • Phase 3 imported active energy	03/04		0306	3	0.1 Wh	1304	2	Wh
+kWh Σ • Total imported active energy	03/04		0309	3	0.1 Wh	1306	2	Wh
-kWh1 • Phase 1 exported active energy	03/04		030C	3	0.1 Wh	1308	2	Wh
-kWh2 • Phase 2 exported active energy	03/04		030F	3	0.1 Wh	130A	2	Wh
-kWh3 • Phase 3 exported active energy	03/04		0312	3	0.1 Wh	130C	2	Wh
-kWh Σ • Total exported active energy	03/04		0315	3	0.1 Wh	130E	2	Wh
+kVAh1-L • Phase 1 imported inductive apparent energy	03/04		0318	3	0.1 VAh	1310	2	VAh
+kVAh2-L • Phase 2 imported inductive apparent energy	03/04		031B	3	0.1 VAh	1312	2	VAh
+kVAh3-L • Phase 3 imported inductive apparent energy	03/04		031E	3	0.1 VAh	1314	2	VAh
+kVAh Σ -L • Total imported inductive apparent energy	03/04		0321	3	0.1 VAh	1316	2	VAh
-kVAh1-L • Phase 1 exported inductive apparent energy	03/04		0324	3	0.1 VAh	1318	2	VAh
-kVAh2-L • Phase 2 exported inductive apparent energy	03/04		0327	3	0.1 VAh	131A	2	VAh
-kVAh3-L • Phase 3 exported inductive apparent energy	03/04		032A	3	0.1 VAh	131C	2	VAh
-kVAh Σ -L • Total exported inductive apparent energy	03/04		032D	3	0.1 VAh	131E	2	VAh
+kVAh1-C • Phase 1 imported capacitive apparent energy	03/04		0330	3	0.1 VAh	1320	2	VAh
+kVAh2-C • Phase 2 imported capacitive apparent energy	03/04		0333	3	0.1 VAh	1322	2	VAh
+kVAh3-C • Phase 3 imported capacitive apparent energy	03/04		0336	3	0.1 VAh	1324	2	VAh
+kVAh Σ -C • Total imported capacitive apparent energy	03/04		0339	3	0.1 VAh	1326	2	VAh
-kVAh1-C • Phase 1 exported capacitive apparent energy	03/04		033C	3	0.1 VAh	1328	2	VAh
-kVAh2-C • Phase 2 exported capacitive apparent energy	03/04		033F	3	0.1 VAh	132A	2	VAh
-kVAh3-C • Phase 3 exported capacitive apparent energy	03/04		0342	3	0.1 VAh	132C	2	VAh
-kVAh Σ -C • Total exported capacitive apparent energy	03/04		0345	3	0.1 VAh	132E	2	VAh
+kvarh1-L • Phase 1 imported inductive reactive energy	03/04		0348	3	0.1 varh	1330	2	varh
+kvarh2-L • Phase 2 imported inductive reactive energy	03/04		034B	3	0.1 varh	1332	2	varh
+kvarh3-L • Phase 3 imported inductive reactive energy	03/04		034E	3	0.1 varh	1334	2	varh
+kvarh Σ -L • Total imported inductive reactive energy	03/04		0351	3	0.1 varh	1336	2	varh
-kvarh1-L • Phase 1 exported inductive reactive energy	03/04		0354	3	0.1 varh	1338	2	varh
-kvarh2-L • Phase 2 exported inductive reactive energy	03/04		0357	3	0.1 varh	133A	2	varh
-kvarh3-L • Phase 3 exported inductive reactive energy	03/04		035A	3	0.1 varh	133C	2	varh
-kvarh Σ -L • Total exported inductive reactive energy	03/04		035D	3	0.1 varh	133E	2	varh
+kvarh1-C • Phase 1 imported capacitive reactive energy	03/04		0360	3	0.1 varh	1340	2	varh
+kvarh2-C • Phase 2 imported capacitive reactive energy	03/04		0363	3	0.1 varh	1342	2	varh
+kvarh3-C • Phase 3 imported capacitive reactive energy	03/04		0366	3	0.1 varh	1344	2	varh
+kvarh Σ -C • Total imported capacitive reactive energy	03/04		0369	3	0.1 varh	1346	2	varh
-kvarh1-C • Phase 1 exported capacitive reactive energy	03/04		036C	3	0.1 varh	1348	2	varh
-kvarh2-C • Phase 2 exported capacitive reactive energy	03/04		036F	3	0.1 varh	134A	2	varh
-kvarh3-C • Phase 3 exported capacitive reactive energy	03/04		0372	3	0.1 varh	134C	2	varh
-kvarh Σ -C • Total exported capacitive reactive energy	03/04		0375	3	0.1 varh	134E	2	varh
Reserved	03/04		0378	3	-	-	-	-

Parameter	F. code (Hex)	Sign	INTEGER			IEEE not available for MODBUS TCP		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.

PARTIAL COUNTER VALUES

$+kWh\sum$ • Total imported active energy	03/04		0400	3	0.1 Wh	1400	2	Wh
$-kWh\sum$ • Total exported active energy	03/04		0403	3	0.1 Wh	1402	2	Wh
$+kVAh\sum-L$ • Total imported inductive apparent energy	03/04		0406	3	0.1 VAh	1404	2	VAh
$-kVAh\sum-L$ • Total exported inductive apparent energy	03/04		0409	3	0.1 VAh	1406	2	VAh
$+kVAh\sum-C$ • Total imported capacitive apparent energy	03/04		040C	3	0.1 VAh	1408	2	VAh
$-kVAh\sum-C$ • Total exported capacitive apparent energy	03/04		040F	3	0.1 VAh	140A	2	VAh
$+kvarh\sum-L$ • Total imported inductive reactive energy	03/04		0412	3	0.1 varh	140C	2	varh
$-kvarh\sum-L$ • Total exported inductive reactive energy	03/04		0415	3	0.1 varh	140E	2	varh
$+kvarh\sum-C$ • Total imported capacitive reactive energy	03/04		0418	3	0.1 varh	1410	2	varh
$-kvarh\sum-C$ • Total exported capacitive reactive energy	03/04		041B	3	0.1 varh	1412	2	varh

BALANCE VALUES

$kWh\sum$ • Total active energy	03/04	X	041E	3	0.1 Wh	1414	2	Wh
$kVAh\sum-L$ • Total inductive apparent energy	03/04	X	0421	3	0.1 VAh	1416	2	VAh
$kVAh\sum-C$ • Total capacitive apparent energy	03/04	X	0424	3	0.1 VAh	1418	2	VAh
$kvarh\sum-L$ • Total inductive reactive energy	03/04	X	0427	3	0.1 varh	141A	2	varh
$kvarh\sum-C$ • Total capacitive reactive energy	03/04	X	042A	3	0.1 varh	141C	2	varh
Reserved	03/04		042D	3	-	-	-	-

Register description	F. code (Hex)	INTEGER		Data meaning
		Register (Hex)	Words	

COUNTER & COMMUNICATION DATA

Counter serial number	03/04	0500	5	10 ASCII chars. (\$00÷\$FF)
Counter model	03/04	0505	1	\$03=6A 3phases, 4wires \$08=80A 3phases, 4wires \$0C=80A 1phase, 2wires
Counter type	03/04	0506	1	\$04=NO MID, with wiring selection \$06=NO MID \$07=MID, with wiring selection \$08=MID
Counter firmware release 1	03/04	0507	1	Convert the read Hex value in Decimal value. e.g. \$66=102 → rel. 1.02
Counter hardware version	03/04	0508	1	Convert the read Hex value in Decimal value. e.g. \$64=100 → rev. 1.00
Reserved	03/04	0509	2	
Tariff in use (not available for counter with integrated ETHERNET)	03/04	050B	1	\$01=tariff 1 \$02=tariff 2
Primary/secondary value	03/04	050C	1	\$00=primary \$01=secondary
Error code	03/04	050D	1	\$00=none \$01=phase sequence error \$02=RTC lost (only for counter with integrated ETHERNET)
CT value (only for counter 6A 3phases model)	03/04	050E	1	\$0001÷\$2710
Reserved	03/04	050F	2	
FSA value	03/04	0511	1	\$00=1A \$01=5A \$02=80A

Register description	F. code (Hex)	INTEGER		Data meaning
		Register (Hex)	Words	
COUNTER & COMMUNICATION DATA				
Wiring mode	03 / 04	0512	1	\$01=3phases, 4 wires, 3 currents \$02=3phases, 3 wires, 2 currents \$03=1-phase \$04=3phases, 3 wires, 3 currents
MODBUS address - counter logical number	03 / 04	0513	1	\$01÷\$F7
MODBUS mode (not available for MODBUS TCP)	03 / 04	0514	1	\$00=7E2 (ASCII) \$01=8N1 (RTU)
Communication speed (not available for MODBUS TCP)	03 / 04	0515	1	\$01=300 bps \$02=600 bps \$03=1200 bps \$04=2400 bps \$05=4800 bps \$06=9600 bps \$07=19200 bps \$08=38400 bps \$09=57600 bps
Reserved	03 / 04	0516	1	
Partial counters status	03 / 04	0517	1	Convert the read Hex value in Binary. e.g. \$0003= 0000000000000011 Each bit corresponds to the status of a partial counter. 0=inactive 1=active 0000000000000011 ← Start to read bit string following the arrow. The first bit corresponds to the status of the first counter in the list: 1) +kWh Σ PAR 2) -kWh Σ PAR 3) +kVAh Σ -L PAR 4) -kVAh Σ -L PAR 5) +kVAh Σ -C PAR 6) -kVAh Σ -C PAR 7) +kvarh Σ -L PAR 8) -kvarh Σ -L PAR 9) +kvarh Σ -C PAR 10) -kvarh Σ -C PAR The last six bits of the string are reserved. In the example, only +kWh Σ PAR and -kWh Σ PAR counters are active.
Module serial number	03 / 04	0518	5	10 ASCII chars. (\$00÷\$FF)
Signed value representation	03 / 04	051D	1	\$00=sign bit \$01=2's complement
Reserved	03 / 04	051E	1	
Module firmware release	03 / 04	051F	1	Convert the read Hex value in Decimal value. e.g. \$66=102 → rel. 1.02
Module hardware version	03 / 04	0520	1	Convert the read Hex value in Decimal value. e.g. \$64=100 → rev. 1.00
Reserved	03 / 04	0521	2	
Register set type	03 / 04	0523	1	00=register set 0
Counter firmware release 2	03 / 04	0600	1	Convert the read Hex value in Decimal value. e.g. \$C8=200 → rel. 2.00

Register description	F. code (Hex)	Register (Hex)	Data meaning
COILS			
Alarm events	01	0000	<p>40 coils</p> <p>Byte 1 - voltage out of range UV3 UV2 UV1 UVΣ OV3 OV2 OV1 OVΣ </p> <p>Byte 2 - line voltage out of range COM RES UV31 UV23 UV12 OV31 OV23 OV12 </p> <p>Byte 3/4 - current out of range RES RES RES RES RES RES UIN UI3 UI2 UI1 UIΣ OIN OI3 OI2 OI1 OIΣ </p> <p>Byte 5 - frequency out of range RES RES RES RES RES RES RES F </p> <p>LEGEND UV=undervoltage OV=overvoltage UI=undercurrent OI=overcurrent F=frequency out of range COM=IR communication error RES=reserved bit to 0</p> <p>NOTE: the voltage, current and frequency threshold values can change according to the counter model. Please refer to the table shown below.</p>

PARAMETER THRESHOLDS FOR ALARMS			
PHASE VOLTAGE available only for 2-4 wire model counters	LINE VOLTAGE not available for 2 wire model counter	CURRENT	FREQUENCY
UV _{L-N} : 230V -20% OV _{L-N} : 240V +20%	UV _{L-L} : 400V -20% OV _{L-L} : 415V +20%	UI: Start current value (Ist) OI: Full scale value (FS)	F low: 45Hz F high: 65Hz

6.2 WRITING registers (Function code \$10)

Register description	F. code (Hex)	INTEGER		Programmable data
		Register (Hex)	Words	
COUNTER & COMMUNICATION DATA				
MODBUS address	10	0513	1	\$01÷\$F7
MODBUS mode (not available for MODBUS TCP)	10	0514	1	\$00=7E2 (ASCII) \$01=8N1 (RTU)
Communication speed (not available for MODBUS TCP)	10	0515	1	\$01=300 bps \$02=600 bps \$03=1200 bps \$04=2400 bps \$05=4800 bps \$06=9600 bps \$07=19200 bps \$08=38400 bps \$09=57600 bps
Partial counters status	10	0517	1	Byte 1 - partial counter selection: \$00=+kWh \sum PAR \$01=-kWh \sum PAR \$02=+kVAh \sum -L PAR \$03=-kVAh \sum -L PAR \$04=+kVAh \sum -C PAR \$05=-kVAh \sum -C PAR \$06=+kvarh \sum -L PAR \$07=-kvarh \sum -L PAR \$08=+kvarh \sum -C PAR \$09=-kvarh \sum -C PAR \$0A=all partial counters Byte 2 - partial counter/s operation: \$01=start \$02=stop \$03=reset e.g. start +kWh \sum PAR counter 00=+kWh \sum PAR 01=start final value to be set: 0001
Switch to register set 1 (not available for LAN GATEWAY modules and for RS485 modules with firmware release lower than 2.00)	10	100B	1	\$01=switch to register set 1

NOTE

\$0513, \$0514, \$0515 writing registers allow to program the communication parameters.

7. Register set 1



The following registers ARE NOT AVAILABLE for RS485 modules with firmware release lower than 2.00 and for LAN GATEWAY modules.

7.1 READING registers (Function code \$01/\$03/\$04)

Parameter	F. code (Hex)	Sign	INTEGER			IEEE		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.
REAL TIME VALUES								
V1 • L-N voltage phase 1	03/04		0000	2	mV	1000	2	V
V2 • L-N voltage phase 2	03/04		0002	2	mV	1002	2	V
V3 • L-N voltage phase 3	03/04		0004	2	mV	1004	2	V
V12 • L-L voltage line 12	03/04		0006	2	mV	1006	2	V
V23 • L-L voltage line 23	03/04		0008	2	mV	1008	2	V
V31 • L-L voltage line 31	03/04		000A	2	mV	100A	2	V
V_{Σ} • Average L-L voltage	03/04		000C	2	mV	100C	2	V
A1 • Phase 1 current	03/04	X	000E	2	mA	100E	2	A
A2 • Phase 2 current	03/04	X	0010	2	mA	1010	2	A
A3 • Phase 3 current	03/04	X	0012	2	mA	1012	2	A
AN • Neutral current	03/04	X	0014	2	mA	1014	2	A
A_{Σ} • Average current	03/04	X	0016	2	mA	1016	2	A
PF1 • Phase 1 power factor	03/04	X	0018	2	0.001	1018	2	-
PF2 • Phase 2 power factor	03/04	X	001A	2	0.001	101A	2	-
PF3 • Phase 3 power factor	03/04	X	001C	2	0.001	101C	2	-
PF_{Σ} • Total power factor	03/04	X	001E	2	0.001	101E	2	-
P1 • Phase 1 active power	03/04	X	0020	4	mW	1020	2	W
P2 • Phase 2 active power	03/04	X	0024	4	mW	1022	2	W
P3 • Phase 3 active power	03/04	X	0028	4	mW	1024	2	W
P_{Σ} • Total active power	03/04	X	002C	4	mW	1026	2	W
S1 • Phase 1 apparent power	03/04	X	0030	4	mVA	1028	2	VA
S2 • Phase 2 apparent power	03/04	X	0034	4	mVA	102A	2	VA
S3 • Phase 3 apparent power	03/04	X	0038	4	mVA	102C	2	VA
S_{Σ} • Total apparent power	03/04	X	003C	4	mVA	102E	2	VA
Q1 • Phase 1 reactive power	03/04	X	0040	4	mvar	1030	2	var
Q2 • Phase 2 reactive power	03/04	X	0044	4	mvar	1032	2	var
Q3 • Phase 3 reactive power	03/04	X	0048	4	mvar	1034	2	var
Q_{Σ} • Total reactive power	03/04	X	004C	4	mvar	1036	2	var
F • Frequency	03/04		0050	2	mHz	1038	2	Hz
Phase sequence	03/04		0052	2	-	103A	2	-
<small>INTEGER: \$00=123-CCW, \$01=321-CW, \$02=not available (1phase counter) IEEE: \$3DFBE76D=123-CCW, \$3E072B02=321-CW, \$0=not available (1phase counter)</small>								

TOTAL COUNTER VALUES

+kWh1 • Phase 1 imported active energy	03/04		0100	4	0.1 Wh	1100	2	Wh
+kWh2 • Phase 2 imported active energy	03/04		0104	4	0.1 Wh	1102	2	Wh
+kWh3 • Phase 3 imported active energy	03/04		0108	4	0.1 Wh	1104	2	Wh
$+kWh_{\Sigma}$ • Total imported active energy	03/04		010C	4	0.1 Wh	1106	2	Wh
-kWh1 • Phase 1 exported active energy	03/04		0110	4	0.1 Wh	1108	2	Wh
-kWh2 • Phase 2 exported active energy	03/04		0114	4	0.1 Wh	110A	2	Wh
-kWh3 • Phase 3 exported active energy	03/04		0118	4	0.1 Wh	110C	2	Wh
$-kWh_{\Sigma}$ • Total exported active energy	03/04		011C	4	0.1 Wh	110E	2	Wh

Parameter	F. code (Hex)	Sign	INTEGER			IEEE		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.

TOTAL COUNTER VALUES

+kVAh1-L • Phase 1 imported lagging apparent energy	03/04		0120	4	0.1 VAh	1110	2	VAh
+kVAh2-L • Phase 2 imported lagging apparent energy	03/04		0124	4	0.1 VAh	1112	2	VAh
+kVAh3-L • Phase 3 imported lagging apparent energy	03/04		0128	4	0.1 VAh	1114	2	VAh
+kVAh Σ -L • Total imported lagging apparent energy	03/04		012C	4	0.1 VAh	1116	2	VAh
-kVAh1-L • Phase 1 exported lagging apparent energy	03/04		0130	4	0.1 VAh	1118	2	VAh
-kVAh2-L • Phase 2 exported lagging apparent energy	03/04		0134	4	0.1 VAh	111A	2	VAh
-kVAh3-L • Phase 3 exported lagging apparent energy	03/04		0138	4	0.1 VAh	111C	2	VAh
-kVAh Σ -L • Total exported lagging apparent energy	03/04		013C	4	0.1 VAh	111E	2	VAh
+kVAh1-C • Phase 1 imported leading apparent energy	03/04		0140	4	0.1 VAh	1120	2	VAh
+kVAh2-C • Phase 2 imported leading apparent energy	03/04		0144	4	0.1 VAh	1122	2	VAh
+kVAh3-C • Phase 3 imported leading apparent energy	03/04		0148	4	0.1 VAh	1124	2	VAh
+kVAh Σ -C • Total imported leading apparent energy	03/04		014C	4	0.1 VAh	1126	2	VAh
-kVAh1-C • Phase 1 exported leading apparent energy	03/04		0150	4	0.1 VAh	1128	2	VAh
-kVAh2-C • Phase 2 exported leading apparent energy	03/04		0154	4	0.1 VAh	112A	2	VAh
-kVAh3-C • Phase 3 exported leading apparent energy	03/04		0158	4	0.1 VAh	112C	2	VAh
-kVAh Σ -C • Total exported leading apparent energy	03/04		015C	4	0.1 VAh	112E	2	VAh
+kvarh1-L • Phase 1 imported lagging reactive energy	03/04		0160	4	0.1 varh	1130	2	varh
+kvarh2-L • Phase 2 imported lagging reactive energy	03/04		0164	4	0.1 varh	1132	2	varh
+kvarh3-L • Phase 3 imported lagging reactive energy	03/04		0168	4	0.1 varh	1134	2	varh
+kvarh Σ -L • Total imported lagging reactive energy	03/04		016C	4	0.1 varh	1136	2	varh
-kvarh1-L • Phase 1 exported lagging reactive energy	03/04		0170	4	0.1 varh	1138	2	varh
-kvarh2-L • Phase 2 exported lagging reactive energy	03/04		0174	4	0.1 varh	113A	2	varh
-kvarh3-L • Phase 3 exported lagging reactive energy	03/04		0178	4	0.1 varh	113C	2	varh
-kvarh Σ -L • Total exported lagging reactive energy	03/04		017C	4	0.1 varh	113E	2	varh
+kvarh1-C • Phase 1 imported leading reactive energy	03/04		0180	4	0.1 varh	1140	2	varh
+kvarh2-C • Phase 2 imported leading reactive energy	03/04		0184	4	0.1 varh	1142	2	varh
+kvarh3-C • Phase 3 imported leading reactive energy	03/04		0188	4	0.1 varh	1144	2	varh
+kvarh Σ -C • Total imported leading reactive energy	03/04		018C	4	0.1 varh	1146	2	varh
-kvarh1-C • Phase 1 exported leading reactive energy	03/04		0190	4	0.1 varh	1148	2	varh
-kvarh2-C • Phase 2 exported leading reactive energy	03/04		0194	4	0.1 varh	114A	2	varh
-kvarh3-C • Phase 3 exported leading reactive energy	03/04		0198	4	0.1 varh	114C	2	varh
-kvarh Σ -C • Total exported leading reactive energy	03/04		019C	4	0.1 varh	114E	2	varh

TARIFF 1 COUNTER VALUES

+kWh1 • Phase 1 imported active energy	03/04		0200	4	0.1 Wh	1200	2	Wh
+kWh2 • Phase 2 imported active energy	03/04		0204	4	0.1 Wh	1202	2	Wh
+kWh3 • Phase 3 imported active energy	03/04		0208	4	0.1 Wh	1204	2	Wh
+kWh Σ • Total imported active energy	03/04		020C	4	0.1 Wh	1206	2	Wh
-kWh1 • Phase 1 exported active energy	03/04		0210	4	0.1 Wh	1208	2	Wh
-kWh2 • Phase 2 exported active energy	03/04		0214	4	0.1 Wh	120A	2	Wh
-kWh3 • Phase 3 exported active energy	03/04		0218	4	0.1 Wh	120C	2	Wh
-kWh Σ • Total exported active energy	03/04		021C	4	0.1 Wh	120E	2	Wh
+kVAh1-L • Phase 1 imported lagging apparent energy	03/04		0220	4	0.1 VAh	1210	2	VAh
+kVAh2-L • Phase 2 imported lagging apparent energy	03/04		0224	4	0.1 VAh	1212	2	VAh
+kVAh3-L • Phase 3 imported lagging apparent energy	03/04		0228	4	0.1 VAh	1214	2	VAh
+kVAh Σ -L • Total imported lagging apparent energy	03/04		022C	4	0.1 VAh	1216	2	VAh

Parameter	F. code (Hex)	Sign	INTEGER			IEEE		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.

TARIFF 1 COUNTER VALUES (not available for counter with integrated ETHERNET)

-kVAh1-L • Phase 1 exported lagging apparent energy	03/04		0230	4	0.1 VAh	1218	2	VAh
-kVAh2-L • Phase 2 exported lagging apparent energy	03/04		0234	4	0.1 VAh	121A	2	VAh
-kVAh3-L • Phase 3 exported lagging apparent energy	03/04		0238	4	0.1 VAh	121C	2	VAh
-kVAh Σ -L • Total exported lagging apparent energy	03/04		023C	4	0.1 VAh	121E	2	VAh
+kVAh1-C • Phase 1 imported leading apparent energy	03/04		0240	4	0.1 VAh	1220	2	VAh
+kVAh2-C • Phase 2 imported leading apparent energy	03/04		0244	4	0.1 VAh	1222	2	VAh
+kVAh3-C • Phase 3 imported leading apparent energy	03/04		0248	4	0.1 VAh	1224	2	VAh
+kVAh Σ -C • Total imported leading apparent energy	03/04		024C	4	0.1 VAh	1226	2	VAh
-kVAh1-C • Phase 1 exported leading apparent energy	03/04		0250	4	0.1 VAh	1228	2	VAh
-kVAh2-C • Phase 2 exported leading apparent energy	03/04		0254	4	0.1 VAh	122A	2	VAh
-kVAh3-C • Phase 3 exported leading apparent energy	03/04		0258	4	0.1 VAh	122C	2	VAh
-kVAh Σ -C • Total exported leading apparent energy	03/04		025C	4	0.1 VAh	122E	2	VAh
+kvarh1-L • Phase 1 imported lagging reactive energy	03/04		0260	4	0.1 varh	1230	2	varh
+kvarh2-L • Phase 2 imported lagging reactive energy	03/04		0264	4	0.1 varh	1232	2	varh
+kvarh3-L • Phase 3 imported lagging reactive energy	03/04		0268	4	0.1 varh	1234	2	varh
+kvarh Σ -L • Total imported lagging reactive energy	03/04		026C	4	0.1 varh	1236	2	varh
-kvarh1-L • Phase 1 exported lagging reactive energy	03/04		0270	4	0.1 varh	1238	2	varh
-kvarh2-L • Phase 2 exported lagging reactive energy	03/04		0274	4	0.1 varh	123A	2	varh
-kvarh3-L • Phase 3 exported lagging reactive energy	03/04		0278	4	0.1 varh	123C	2	varh
-kvarh Σ -L • Total exported lagging reactive energy	03/04		027C	4	0.1 varh	123E	2	varh
+kvarh1-C • Phase 1 imported leading reactive energy	03/04		0280	4	0.1 varh	1240	2	varh
+kvarh2-C • Phase 2 imported leading reactive energy	03/04		0284	4	0.1 varh	1242	2	varh
+kvarh3-C • Phase 3 imported leading reactive energy	03/04		0288	4	0.1 varh	1244	2	varh
+kvarh Σ -C • Total imported leading reactive energy	03/04		028C	4	0.1 varh	1246	2	varh
-kvarh1-C • Phase 1 exported leading reactive energy	03/04		0290	4	0.1 varh	1248	2	varh
-kvarh2-C • Phase 2 exported leading reactive energy	03/04		0294	4	0.1 varh	124A	2	varh
-kvarh3-C • Phase 3 exported leading reactive energy	03/04		0298	4	0.1 varh	124C	2	varh
-kvarh Σ -C • Total exported leading reactive energy	03/04		029C	4	0.1 varh	124E	2	varh

TARIFF 2 COUNTER VALUES (not available for counter with integrated ETHERNET)

+kWh1 • Phase 1 imported active energy	03/04		0300	4	0.1 Wh	1300	2	Wh
+kWh2 • Phase 2 imported active energy	03/04		0304	4	0.1 Wh	1302	2	Wh
+kWh3 • Phase 3 imported active energy	03/04		0308	4	0.1 Wh	1304	2	Wh
+kWh Σ • Total imported active energy	03/04		030C	4	0.1 Wh	1306	2	Wh
-kWh1 • Phase 1 exported active energy	03/04		0310	4	0.1 Wh	1308	2	Wh
-kWh2 • Phase 2 exported active energy	03/04		0314	4	0.1 Wh	130A	2	Wh
-kWh3 • Phase 3 exported active energy	03/04		0318	4	0.1 Wh	130C	2	Wh
-kWh Σ • Total exported active energy	03/04		031C	4	0.1 Wh	130E	2	Wh
+kVAh1-L • Phase 1 imported lagging apparent energy	03/04		0320	4	0.1 VAh	1310	2	VAh
+kVAh2-L • Phase 2 imported lagging apparent energy	03/04		0324	4	0.1 VAh	1312	2	VAh
+kVAh3-L • Phase 3 imported lagging apparent energy	03/04		0328	4	0.1 VAh	1314	2	VAh
+kVAh Σ -L • Total imported lagging apparent energy	03/04		032C	4	0.1 VAh	1316	2	VAh
-kVAh1-L • Phase 1 exported lagging apparent energy	03/04		0330	4	0.1 VAh	1318	2	VAh
-kVAh2-L • Phase 2 exported lagging apparent energy	03/04		0334	4	0.1 VAh	131A	2	VAh
-kVAh3-L • Phase 3 exported lagging apparent energy	03/04		0338	4	0.1 VAh	131C	2	VAh
-kVAh Σ -L • Total exported lagging apparent energy	03/04		033C	4	0.1 VAh	131E	2	VAh

Parameter	F. code (Hex)	Sign	INTEGER			IEEE		
			Register (Hex)	Words	M.U.	Register (Hex)	Words	M.U.

TARIFF 2 COUNTER VALUES (not available for counter with integrated ETHERNET)

+kVAh1-C • Phase 1 imported leading apparent energy	03/04		0340	4	0.1 VAh	1320	2	VAh
+kVAh2-C • Phase 2 imported leading apparent energy	03/04		0344	4	0.1 VAh	1322	2	VAh
+kVAh3-C • Phase 3 imported leading apparent energy	03/04		0348	4	0.1 VAh	1324	2	VAh
+kVAh Σ -C • Total imported leading apparent energy	03/04		034C	4	0.1 VAh	1326	2	VAh
-kVAh1-C • Phase 1 exported leading apparent energy	03/04		0350	4	0.1 VAh	1328	2	VAh
-kVAh2-C • Phase 2 exported leading apparent energy	03/04		0354	4	0.1 VAh	132A	2	VAh
-kVAh3-C • Phase 3 exported leading apparent energy	03/04		0358	4	0.1 VAh	132C	2	VAh
-kVAh Σ -C • Total exported leading apparent energy	03/04		035C	4	0.1 VAh	132E	2	VAh
+kvarh1-L • Phase 1 imported lagging reactive energy	03/04		0360	4	0.1 varh	1330	2	varh
+kvarh2-L • Phase 2 imported lagging reactive energy	03/04		0364	4	0.1 varh	1332	2	varh
+kvarh3-L • Phase 3 imported lagging reactive energy	03/04		0368	4	0.1 varh	1334	2	varh
+kvarh Σ -L • Total imported lagging reactive energy	03/04		036C	4	0.1 varh	1336	2	varh
-kvarh1-L • Phase 1 exported lagging reactive energy	03/04		0370	4	0.1 varh	1338	2	varh
-kvarh2-L • Phase 2 exported lagging reactive energy	03/04		0374	4	0.1 varh	133A	2	varh
-kvarh3-L • Phase 3 exported lagging reactive energy	03/04		0378	4	0.1 varh	133C	2	varh
-kvarh Σ -L • Total exported lagging reactive energy	03/04		037C	4	0.1 varh	133E	2	varh
+kvarh1-C • Phase 1 imported leading reactive energy	03/04		0380	4	0.1 varh	1340	2	varh
+kvarh2-C • Phase 2 imported leading reactive energy	03/04		0384	4	0.1 varh	1342	2	varh
+kvarh3-C • Phase 3 imported leading reactive energy	03/04		0388	4	0.1 varh	1344	2	varh
+kvarh Σ -C • Total imported leading reactive energy	03/04		038C	4	0.1 varh	1346	2	varh
-kvarh1-C • Phase 1 exported leading reactive energy	03/04		0390	4	0.1 varh	1348	2	varh
-kvarh2-C • Phase 2 exported leading reactive energy	03/04		0394	4	0.1 varh	134A	2	varh
-kvarh3-C • Phase 3 exported leading reactive energy	03/04		0398	4	0.1 varh	134C	2	varh
-kvarh Σ -C • Total exported leading reactive energy	03/04		039C	4	0.1 varh	134E	2	varh

PARTIAL COUNTER VALUES

+kWh Σ • Total imported active energy	03/04		0400	4	0.1 Wh	1400	2	Wh
-kWh Σ • Total exported active energy	03/04		0404	4	0.1 Wh	1402	2	Wh
+kVAh Σ -L • Total imported lagging apparent energy	03/04		0408	4	0.1 VAh	1404	2	VAh
-kVAh Σ -L • Total exported lagging apparent energy	03/04		040C	4	0.1 VAh	1406	2	VAh
+kVAh Σ -C • Total imported leading apparent energy	03/04		0410	4	0.1 VAh	1408	2	VAh
-kVAh Σ -C • Total exported leading apparent energy	03/04		0414	4	0.1 VAh	140A	2	VAh
+kvarh Σ -L • Total imported lagging reactive energy	03/04		0418	4	0.1 varh	140C	2	varh
-kvarh Σ -L • Total exported lagging reactive energy	03/04		041C	4	0.1 varh	140E	2	varh
+kvarh Σ -C • Total imported leading reactive energy	03/04		0420	4	0.1 varh	1410	2	varh
-kvarh Σ -C • Total exported leading reactive energy	03/04		0424	4	0.1 varh	1412	2	varh

BALANCE VALUES

kWh Σ • Total active energy	03/04	X	0428	4	0.1 Wh	1414	2	Wh
kVAh Σ -L • Total lagging apparent energy	03/04	X	042C	4	0.1 VAh	1416	2	VAh
kVAh Σ -C • Total leading apparent energy	03/04	X	0430	4	0.1 VAh	1418	2	VAh
kvarh Σ -L • Total lagging reactive energy	03/04	X	0434	4	0.1 varh	141A	2	varh
kvarh Σ -C • Total leading reactive energy	03/04	X	0438	4	0.1 varh	141C	2	varh

Register description	F. code (Hex)	INTEGER		Data meaning
		Register (Hex)	Words	
COUNTER & COMMUNICATION DATA				
Counter serial number	03/04	0500	6	10 ASCII chars. (\$00-\$FF) [LSB]
Counter model	03/04	0506	2	\$03=6A 3phases, 4wires \$08=80A 3phases, 4wires \$0C=80A 1phase, 2wires
Counter type	03/04	0508	2	\$04=NO MID, with wiring selection \$06=NO MID \$07=MID, with wiring selection \$08=MID
Counter firmware release 1	03/04	050A	2	Convert the read Hex value in Decimal value. e.g. \$66=102 → rel. 1.02
Counter hardware version	03/04	050C	2	Convert the read Hex value in Decimal value. e.g. \$64=100 → rev. 1.00
Reserved	03/04	050E	2	
Tariff in use (not available for counter with integrated ETHERNET)	03/04	0510	2	\$01=tariff 1 \$02=tariff 2
Primary/secondary value	03/04	0512	2	\$00=primary \$01=secondary
Error code	03/04	0514	2	\$00=none \$01=phase sequence error \$02=RTC lost (only for counter with integrated ETHERNET)
CT value (only for counter 6A 3phase model)	03/04	0516	2	\$0001-\$2710
Reserved	03/04	0518	2	
FSA value	03/04	051A	2	\$00=1A \$01=5A \$02=80A
Wiring mode	03/04	051C	2	\$01=3phases, 4 wires, 3 currents \$02=3phases, 3 wires, 2 currents \$03=1-phase \$04=3phases, 3 wires, 3 currents
MODBUS address - counter logical number	03/04	051E	2	\$01÷\$F7
MODBUS mode (not available for MODBUS TCP)	03/04	0520	2	\$00=7E2 (ASCII) \$01=8N1 (RTU)
Communication speed (not available for MODBUS TCP)	03/04	0522	2	\$01=300 bps \$02=600 bps \$03=1200 bps \$04=2400 bps \$05=4800 bps \$06=9600 bps \$07=19200 bps \$08=38400 bps \$09=57600 bps
Reserved	03/04	0524	2	

Register description	F. code (Hex)	INTEGER		Data meaning
		Register (Hex)	Words	
COUNTER & COMMUNICATION DATA				
Partial counters status	03/04	0526	2	<p>Consider only the last word (e.g. \$00000003→\$0003) Convert the read Hex value in Binary. e.g. \$0003= 0000000000000011</p> <p>Each bit corresponds to the status of a partial counter. 0=inactive 1=active</p> <p>0000000000000011 ←</p> <p>Start to read bit string following the arrow. The first bit corresponds to the status of the first counter in the list:</p> <ol style="list-style-type: none"> 1) +kWhΣ PAR 2) -kWhΣ PAR 3) +kVAhΣ-L PAR 4) -kVAhΣ-L PAR 5) +kVAhΣ-C PAR 6) -kVAhΣ-C PAR 7) +kvarhΣ-L PAR 8) -kvarhΣ-L PAR 9) +kvarhΣ-C PAR 10) -kvarhΣ-C PAR <p>The last six bits of the string are reserved.</p> <p>In the example, only +kWhΣ PAR and -kWhΣ PAR counters are active.</p>
Module serial number	03 / 04	0528	6	10 ASCII chars. (\$00÷\$FF) (LSB)
Signed value representation	03 / 04	052E	2	\$00=sign bit \$01=2's complement
Reserved	03 / 04	0530	2	
Module firmware release	03 / 04	0532	2	Convert the read Hex value in Decimal value. e.g. \$66=102 → rel. 1.02
Module hardware version	03 / 04	0534	2	Convert the read Hex value in Decimal value. e.g. \$64=100 → rev. 1.00
Reserved	03 / 04	0536	2	
Register set type	03 / 04	0538	2	01=register set 1
Counter firmware release 2	03 / 04	0600	2	Convert the read Hex value in Decimal value. e.g. \$C8=200 → rel. 2.00

Register description	F. code (Hex)	Register (Hex)	Data meaning
COILS			
Alarm events	01	0000	<p>40 coils</p> <p>Byte 1 - voltage out of range UV3 UV2 UV1 UVΣ OV3 OV2 OV1 OVΣ </p> <p>Byte 2 - line voltage out of range COM RES UV31 UV23 UV12 OV31 OV23 OV12 </p> <p>Byte 3/4 - current out of range RES RES RES RES RES RES UIN UI3 UI2 UI1 UIΣ OIN OI3 OI2 OI1 OIΣ </p> <p>Byte 5 - frequency out of range RES RES RES RES RES RES RES F </p> <p>LEGEND UV=undervoltage OV=overvoltage UI=undercurrent OI=overcurrent F=frequency out of range COM=IR communication error RES=reserved bit to 0</p> <p>NOTE: the voltage, current and frequency threshold values can change according to the counter model. Please refer to the table shown below.</p>

PARAMETER THRESHOLDS			
PHASE VOLTAGE available only for 2-4 wire model counters	LINE VOLTAGE not available for 2 wire model counter	CURRENT	FREQUENCY
UV _{L-N} : 230V -20% OV _{L-N} : 240V +20%	UV _{L-L} : 400V -20% OV _{L-L} : 415V +20%	UI: Start current value (Ist) OI: Full scale value (FS)	F low: 45Hz F high: 65Hz

7.2 WRITING registers (Function code \$10)

Register description	F. code (Hex)	INTEGER		Programmable data
		Register (Hex)	Words	
COUNTER & COMMUNICATION DATA				
MODBUS address	10	051E	2	\$01÷\$F7
MODBUS mode (not available for MODBUS TCP)	10	0520	2	\$00=7E2 (ASCII) \$01=8N1 (RTU)
Communication speed (not available for MODBUS TCP)	10	0522	2	\$01=300 bps \$02=600 bps \$03=1200 bps \$04=2400 bps \$05=4800 bps \$06=9600 bps \$07=19200 bps \$08=38400 bps \$09=57600 bps
Partial counters status	10	0526	2	Set the MS word always to 0000. The LS word must be structured as follows: Byte 1 - partial counter selection: \$00=+kWh Σ PAR \$01=-kWh Σ PAR \$02=+kVAh Σ -L PAR \$03=-kVAh Σ -L PAR \$04=+kVAh Σ -C PAR \$05=-kVAh Σ -C PAR \$06=+kvarh Σ -L PAR \$07=-kvarh Σ -L PAR \$08=+kvarh Σ -C PAR \$09=-kvarh Σ -C PAR \$0A=all partial counters Byte 2 - partial counter/s operation: \$01=start \$02=stop \$03=reset e.g. start +kWh Σ PAR counter 00=+kWh Σ PAR 01=start final value to be set: 00000001
Switch to register set 0	10	1010	2	\$00=switch to register set 0



NOTE

\$051E, \$0520, \$0522 writing registers allow to program the communication parameters.



ENERDIS

16, rue Georges Besse Silic 44
92182 ANTONY Cedex - FRANCE
Tel. : (33) 01 75 60 10 30 • Fax : (33) 01 46 66 62 54
info@enerdis.fr • www.enerdis.fr